

DYEINGS ON CORDUROY  
WITH IMMEDIATE COLOURS

TRADE-



MARK.

CASSELLA COLOR COMPANY

---

182 AND 184 FRONT STREET

NEW YORK


BOSTON: 39 OLIVER STREET

PHILADELPHIA: 126 AND 128 SOUTH FRONT STREET

PROVIDENCE: 64 EXCHANGE PLACE

ATLANTA: 47 NORTH PRYOR STREET

MONTREAL: CANADA: 59 WILLIAM STREET.



Franklin Institute Library

PHILADELPHIA

Class 667-2

Book C275

3353

Accession 65745

**REFERENCE**

GIVEN BY

Companij



## DYEINGS ON CORDUROY WITH IMMEDIAL COLOURS

### Directions for Dyeing:

Dye in the manner customary for Immedial Colours on corduroy. For full particulars regarding starting baths, method of dyeing, and topping with Basic Colours, see our "Manual of Dyeing", Vol. I.

1.	19.
2.25% Immedial Yellow Olive 5G pat.	1.8 % Immedial Direct Blue B extra conc. pat.
2.	20.
4.5 % Immedial Yellow Olive 5G pat.	4 % Immedial Direct Blue B extra conc. pat.
3.	21.
2.25% Immedial Yellow Olive G pat.	2.5 % Immedial Indogene GCL conc. pat.
4.	22.
4.5 % Immedial Yellow Olive G pat.	5.5 % Immedial Indogene GCL conc. pat.
5.	23.
2 % Immedial Yellow Brown EN pat.	3 % Immedial Green Blue CV pat.
6.	24.
4.5 % Immedial Yellow Brown EN pat.	6 % Immedial Green Blue CV pat.
7.	25.
1.8 % Immedial Cutch O pat.	2.5 % Immedial Dark Brown D conc. pat.
8.	26.
3.8 % Immedial Cutch O pat.	6 % Immedial Dark Brown D conc. pat.
9.	27.
2.25% Immedial Brown BR.	2.5 % Immedial Dark Green B.
10.	28.
4.5 % Immedial Brown BR.	6 % Immedial Dark Green B.
11.	29.
2 % Immedial Maroon B conc. pat.	0.75% Immedial Carbon B.
12.	30.
4.5 % Immedial Maroon B conc. pat.	4 % Immedial Carbon B.
13.	31.
2 % Immedial Bordeaux GF conc. pat.	0.75% Immedial Carbon R.
14.	32.
5 % Immedial Bordeaux GF conc. pat.	4 % Immedial Carbon R.
15.	33.
3.5 % Immedial Purple C pat.	0.1 % Immedial Dark Brown D conc. pat.
16.	0.02% Immedial Yellow Olive 5G pat.
10 % Immedial Purple C pat.	34.
17.	0.1 % Immedial Dark Brown D conc. pat.
3.25% Immedial Green GG extra.	0.02% Immedial Yellow Olive 5G pat.
18.	0.05% Immedial Carbon R.
7.5 % Immedial Green GG extra.	

Barclay Institute  
PHILADELPHIA

87-B18350

35.  
0.25% Immedial Dark Brown D conc. pat.  
0.02% Immedial Cutch O pat.

36.  
0.45% Immedial Dark Brown D conc. pat.  
0.1 % Immedial Yellow Olive 5G pat.

37.  
0.45% Immedial Dark Brown D conc. pat.  
0.08% Immedial Cutch O pat.

38.  
0.55% Immedial Dark Brown D conc. pat.

39.  
0.5 % Immedial Dark Brown D conc. pat.  
0.05% Immedial Carbon R.

40.  
0.8 % Immedial Dark Brown D conc. pat.  
0.12% Immedial Brown BR  
0.1 % Immedial Carbon R.

41.  
0.35% Immedial Dark Brown D conc. pat.  
0.15% Immedial Carbon R.

42.  
0.35% Immedial Yellow Olive 5G pat.  
0.3 % Immedial Carbon B.

43.  
1.2 % Immedial Dark Brown D conc. pat.  
0.25% Immedial Carbon B.

44.  
0.8 % Immedial Dark Brown D conc. pat.  
0.15% Immedial Carbon R  
0.06% Immedial Yellow Olive 5G pat.

45.  
0.6 % Immedial Dark Brown D conc. pat.  
0.3 % Immedial Carbon R  
0.06% Immedial Yellow Olive 5G pat.

46.  
1 % Immedial Dark Brown D conc. pat.  
0.2 % Immedial Brown BR  
0.12% Immedial Carbon R.

47.  
1 % Immedial Dark Brown D conc. pat.  
0.35% Immedial Carbon R.

48.  
1.5 % Immedial Dark Brown D conc. pat.  
0.5 % Immedial Carbon B.

49.  
0.3 % Immedial Dark Brown D conc. pat.  
0.1 % Immedial Cutch O pat.

50.  
0.35% Immedial Dark Brown D conc. pat.  
0.11% Immedial Cutch O pat.

51.  
3 % Immedial Yellow Olive 5G pat.  
0.2 % Immedial Cutch O pat.

52.  
1.2 % Immedial Yellow Olive 5G pat.  
0.3 % Immedial Dark Brown D conc. pat.

53.  
0.4 % Immedial Yellow Olive 5G pat.  
0.2 % Immedial Dark Brown D conc. pat.  
0.08% Immedial Cutch O pat.

54.  
2.25% Immedial Yellow Olive 5G pat.  
1.2 % Immedial Dark Brown D conc. pat.

55.  
0.4 % Immedial Yellow Brown EN pat.  
0.15% Immedial Dark Brown D conc. pat.  
0.2 % Immedial Brown BR.

56.  
0.5 % Immedial Yellow Brown EN pat.  
0.3 % Immedial Dark Brown D conc. pat.  
0.3 % Immedial Brown BR.

57.  
1 % Immedial Dark Brown D conc. pat.  
0.3 % Immedial Brown BR.

58.  
0.8 % Immedial Dark Brown D conc. pat.  
0.8 % Immedial Yellow Brown EN pat.

59.  
1.6 % Immedial Dark Brown D conc. pat.  
0.75% Immedial Yellow Olive 5G pat.

60.  
3.4 % Immedial Yellow Brown EN pat.  
0.9 % Immedial Dark Brown D conc. pat.

61.  
1.75% Immedial Dark Brown D conc. pat.  
0.65% Immedial Yellow Olive 5G pat.

62.  
2 % Immedial Dark Brown D conc. pat.  
1.4 % Immedial Yellow Olive 5G pat.

63.  
3 % Immedial Yellow Brown EN pat.  
1.5 % Immedial Dark Brown D conc. pat.  
1.2 % Immedial Brown BR.

64.  
3 % Immedial Yellow Brown EN pat.  
1.8 % Immedial Dark Brown D conc. pat.

65.  
0.6 % Immedial Dark Green B  
0.2 % Immedial Dark Brown D conc. pat.

66.  
1.3 % Immedial Dark Green B  
0.35% Immedial Dark Brown D conc. pat.  
0.2 % Immedial Cutch O pat.

67.  
2 % Immedial Dark Green B  
0.4 % Immedial Dark Brown D conc. pat.

INTERNATIONAL

APPLIED

68.  
 4 % Immedial Dark Green B  
 3 % Immedial Yellow Brown EN pat.  
 0.3 % Immedial Carbon B.

69.  
 5 % Immedial Dark Green B  
 0.5 % Immedial Yellow Olive 5G pat.

70.  
 5 % Immedial Dark Green B  
 0.6 % Immedial Direkt Blue B extra conc. pat.

71.  
 4 % Immedial Dark Green B  
 3 % Immedial Yellow Olive 5G pat.  
 0.9 % Immedial Carbon B.

72.  
 3 % Immedial Dark Green B  
 0.8 % Immedial Carbon B.

73.  
 1.35% Immedial Dark Green B  
 0.4 % Immedial Yellow Olive 5G pat.

74.  
 1.1 % Immedial Dark Green B  
 0.9 % Immedial Green GG extra.

75.  
 4 % Immedial Green Blue CV  
 0.9 % Immedial Dark Green B.

76.  
 5 % Immedial Green Blue CV  
 3 % Immedial Dark Green B  
 topped with  
 0.1 % Brilliant Green crystals extra.

77.  
 2.6 % Immedial Green Blue CV  
 1.1 % Immedial Dark Green B.

78.  
 4 % Immedial Green GG extra  
 3 % Immedial Dark Green B.

79.  
 1.7 % Immedial Green GG extra  
 4 % Immedial Dark Green B  
 topped with  
 0.1 % Brilliant Green crystals extra  
 0.1 % Thioflavine TCN.

80.  
 1.7 % Immedial Green GG extra  
 4 % Immedial Dark Green B  
 0.75% Immedial Yellow Olive 5G pat.  
 topped with  
 0.1 % Thioflavine TCN  
 0.05% Brilliant Green crystals extra.

81.  
 2.6 % Immedial Yellow Olive G pat.  
 1.7 % Immedial Dark Green B  
 0.9 % Immedial Dark Brown D conc. pat.

82.  
 3.5 % Immedial Dark Green B  
 3 % Immedial Yellow Brown EN pat.  
 0.9 % Immedial Dark Brown D conc. pat.

83.  
 1.7 % Immedial Dark Green B  
 1.7 % Immedial Yellow Brown EN pat.  
 2 % Immedial Dark Brown D conc. pat.

84.  
 1 % Immedial Dark Brown D conc. pat.  
 5.5 % Immedial Yellow Brown EN pat.  
 1 % Immedial Brown BR  
 topped with  
 0.25% Bismarck Brown FFG.

85.  
 4.5 % Immedial Yellow Brown EN pat.  
 1.7 % Immedial Brown BR  
 1.2 % Immedial Dark Brown D conc. pat.

86.  
 3.4 % Immedial Brown BR  
 1.35% Immedial Dark Brown D conc. pat.  
 topped with  
 0.1 % Bismarck Brown FFG.

87.  
 4 % Immedial Dark Brown D conc. pat.  
 3.25% Immedial Brown BR.

88.  
 5.25% Immedial Dark Brown D conc. pat.  
 4 % Immedial Brown BR.

89.  
 4.5 % Immedial Yellow Brown EN pat.  
 1 % Immedial Dark Brown D conc. pat.

90.  
 4.8 % Immedial Yellow Brown EN pat.  
 1.5 % Immedial Dark Brown D conc. pat.  
 0.3 % Immedial Brown BR  
 topped with  
 0.25% Bismarck Brown FFG.

91.  
 4 % Immedial Yellow Olive 5G pat.  
 3 % Immedial Yellow Brown EN pat.

92.  
 2 % Immedial Yellow Brown EN pat.  
 1.7 % Immedial Dark Brown D conc. pat.

93.  
 1.7 % Immedial Yellow Brown EN pat.  
 1.7 % Immedial Dark Brown D conc. pat.  
 0.9 % Immedial Yellow Olive G.

94.  
 1.8 % Immedial Brown BR  
 1.2 % Immedial Dark Brown D conc. pat.  
 0.7 % Immedial Yellow Brown EN pat.

95.  
 3 % Immedial Brown BR  
 2.6 % Immedial Dark Brown D conc. pat.



96.  
3.5 % Immedial Brown BR  
3 % Immedial Dark Brown D conc. pat.

97.  
2.6 % Immedial Bordeaux GF conc. pat.  
0.9 % Immedial Purple C pat.

98.  
2.45% Immedial Maroon B conc. pat.  
1.35% Immedial Cutch O pat.

99.  
3 % Immedial Cutch O pat.  
1.1 % Immedial Maroon B conc. pat.

100.  
2.25% Immedial Cutch O pat.  
2 % Immedial Brown BR  
0.06% Immedial Maroon B conc. pat.

101.  
3.4 % Immedial Yellow Brown EN pat.  
3 % Immedial Brown BR.

102.  
2 % Immedial Brown BR  
0.9 % Immedial Yellow Brown EN pat.  
2 % Immedial Dark Brown D conc. pat.  
topped with  
0.1 % Safranin S No 150  
0.05% Bismarck Brown FFG.

103.  
2 % Immedial Brown BR  
1.1 % Immedial Yellow Brown EN pat.  
1.35% Immedial Dark Brown D conc. pat.  
topped with  
0.15% Bismarck Brown FFG.

104.  
3 % Immedial Brown BR  
1.1 % Immedial Yellow Brown EN pat.  
1 % Immedial Dark Brown D conc. pat.

105.  
0.6 % Immedial Indogene GCL conc. pat.  
0.1 % Immedial Direct Blue B extra conc. pat.

106.  
4 % Immedial Green Blue CV pat.  
1.8 % Immedial Indogene GCL conc. pat.

107.  
4.5 % Immedial Indogene GCL conc. pat.  
0.9 % Immedial Green Blue CV pat.

108.  
4.8 % Immedial Indogene GCL conc. pat.  
0.7 % Immedial Green Blue CV pat.  
topped with  
0.2 % Methylene Blue BB.

109.  
2.6 % Immedial Indogene GCL conc. pat.  
0.9 % Immedial Direct Blue B extra conc. pat.

110.  
3 % Immedial Indogene GCL conc. pat.  
2.4 % Immedial Direct Blue B extra conc. pat.  
topped with  
0.1 % Methylene Blue BB.


111.  
4 % Immedial Brilliant Carbon FG pat.

112.  
4 % Immedial Carbon JHJ.

The stated quantities of dyestuff are those required for dyeing subsequent lots in a standing bath.

Without guarantee.



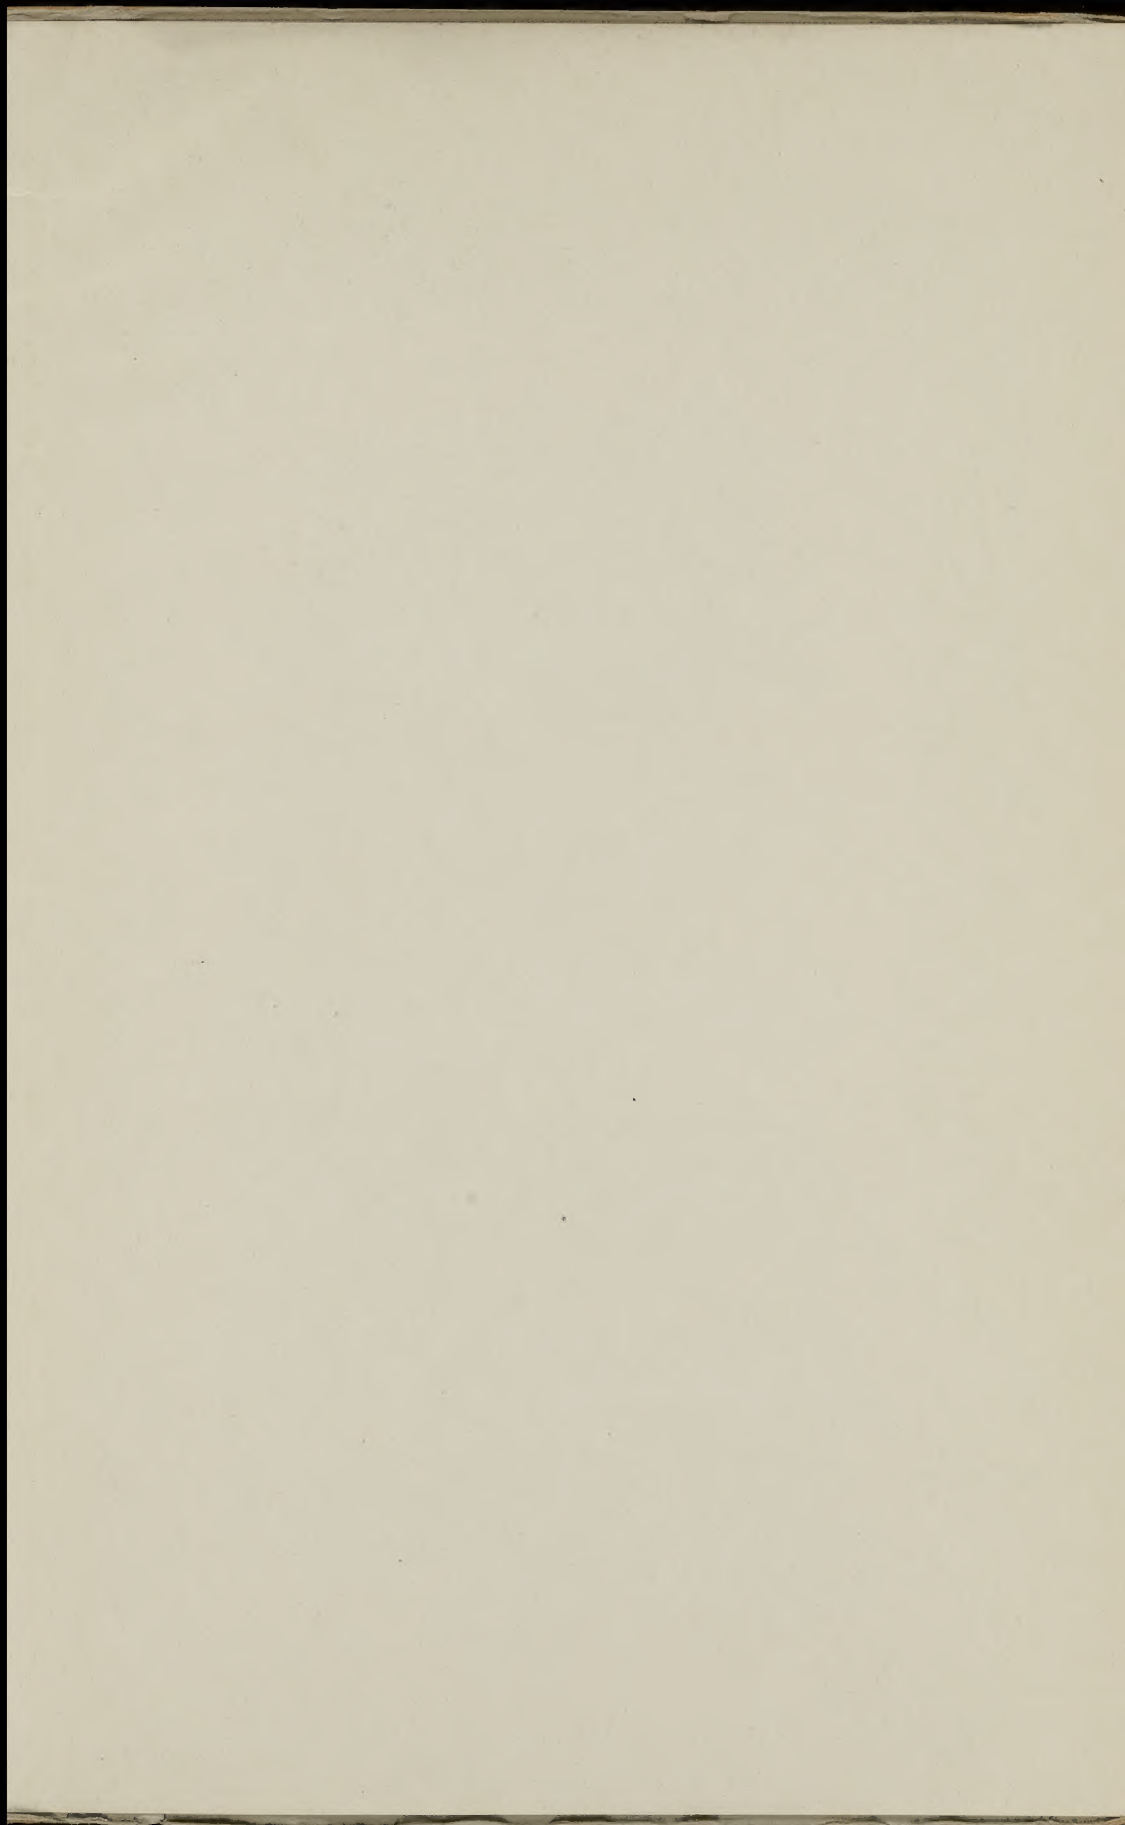



# SELF SHADES

1



2



3




4



5



6

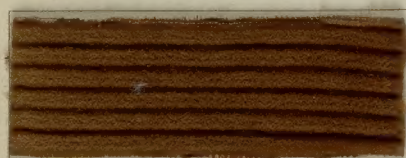

7



8



9



10



11



12




13



14



15

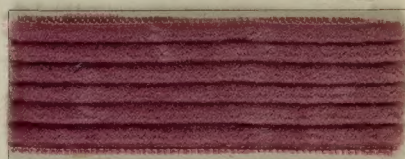

16



CASSELLA COLOR COMPANY, NEW YORK.




# SELF SHADES


17



18

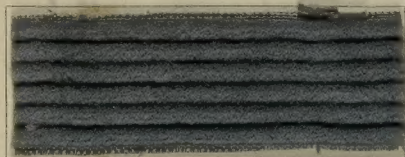


19

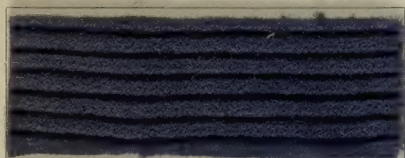


20




21

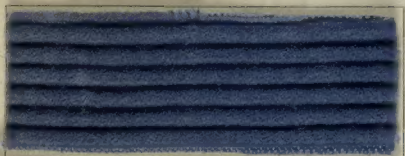

22

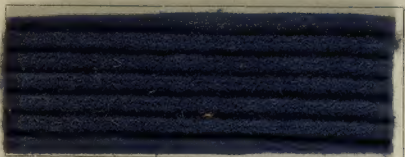

23

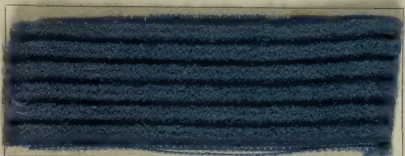

24



25



26



27



28



29



30



31




32




# MODE SHADES


33

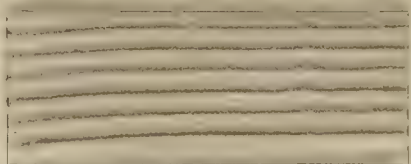


34

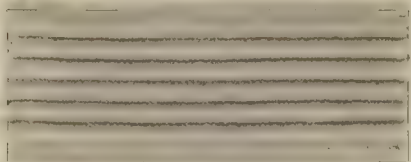


35

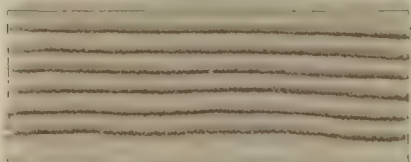


36

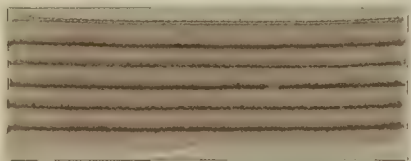


37

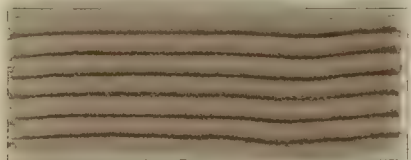

38

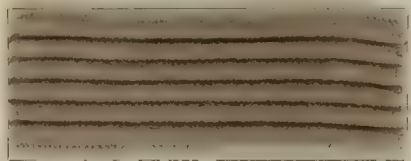


39

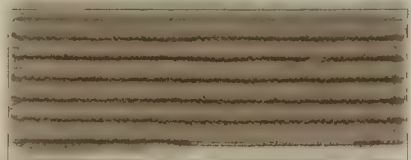


40




41

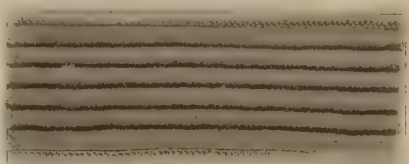


42

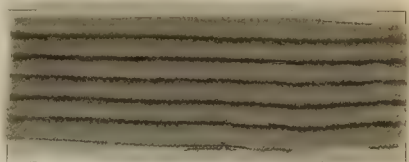


43

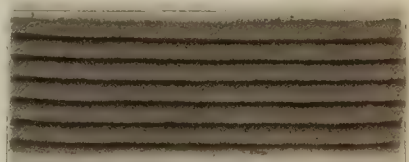


44

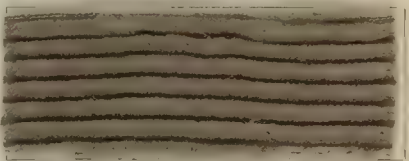

45

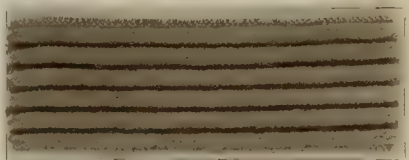


46

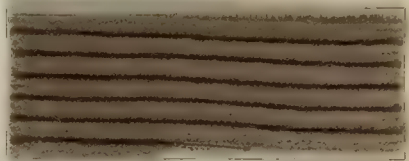

47




48

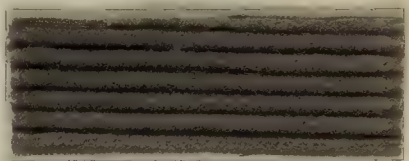




# MODE SHADES


49

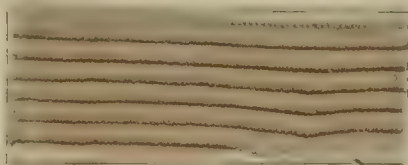


50

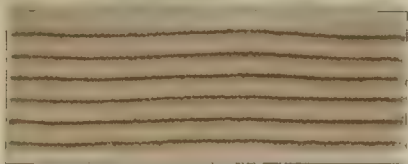


51

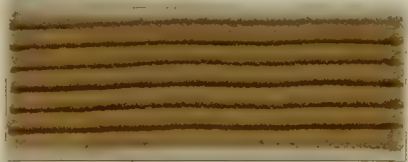

52

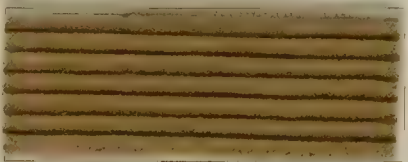

53

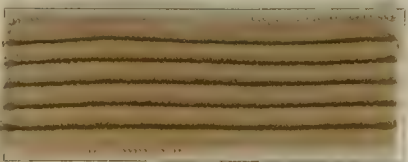


54




55




56

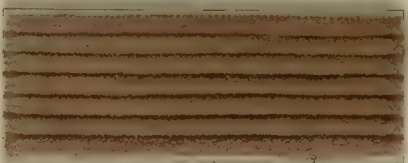

57

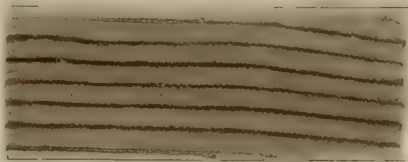


58

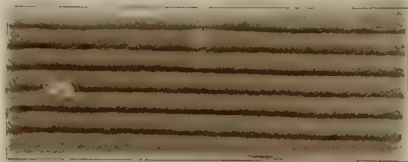


59




60

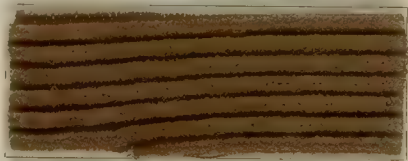


61

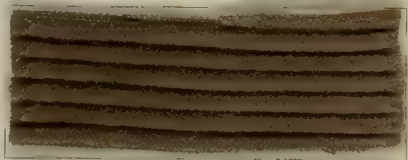


62

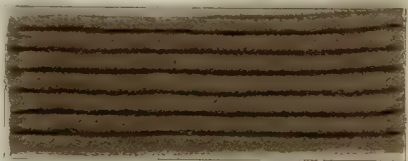

63

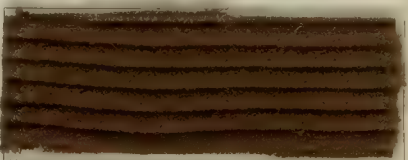


64

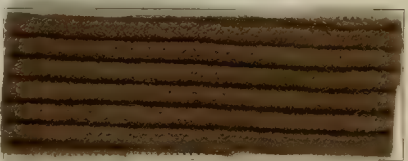


# MODE SHADES

65

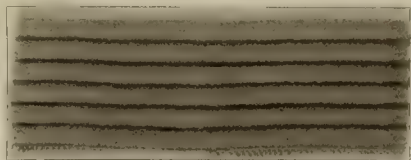

66

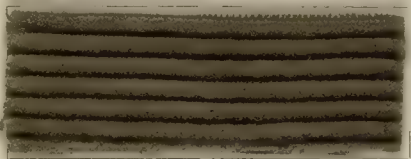

67



68




69



70



71

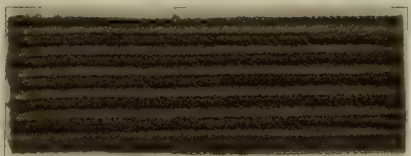


72




73



74

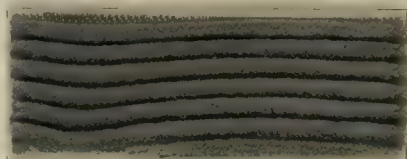

75

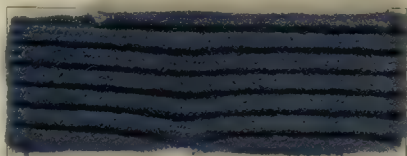


76



77



78

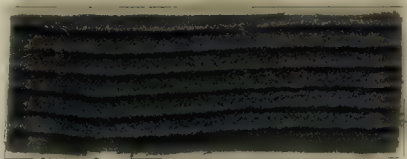

79



80




CASSELLA COLOR COMPANY, NEW YORK.




MODE SHADES


81

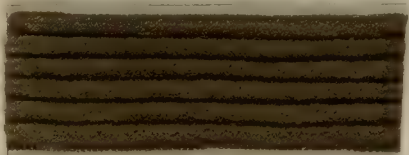


82

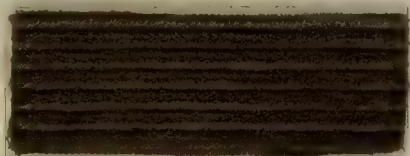


83

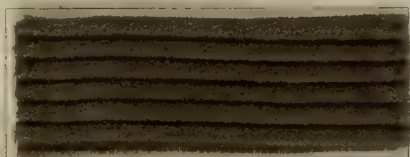

84

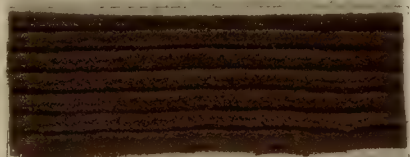

85

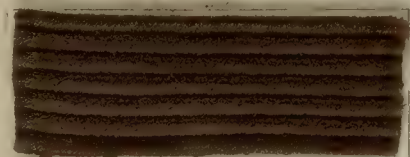

86




87



88



89

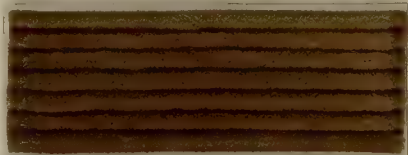

90



91



92



93



94



95



96



CASSELLA COLOR COMPANY, NEW YORK.



# MODE SHADES

97



98



99



100



101



102



103




104



105




106

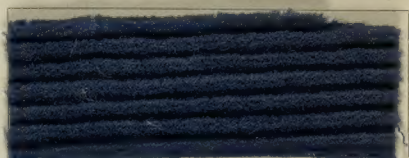


107



108

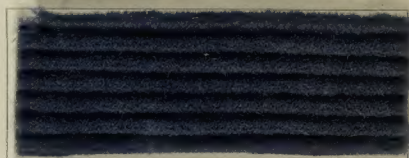

109

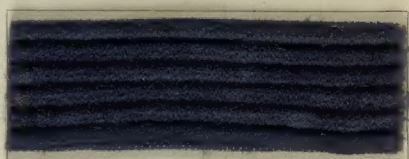

110




111



112



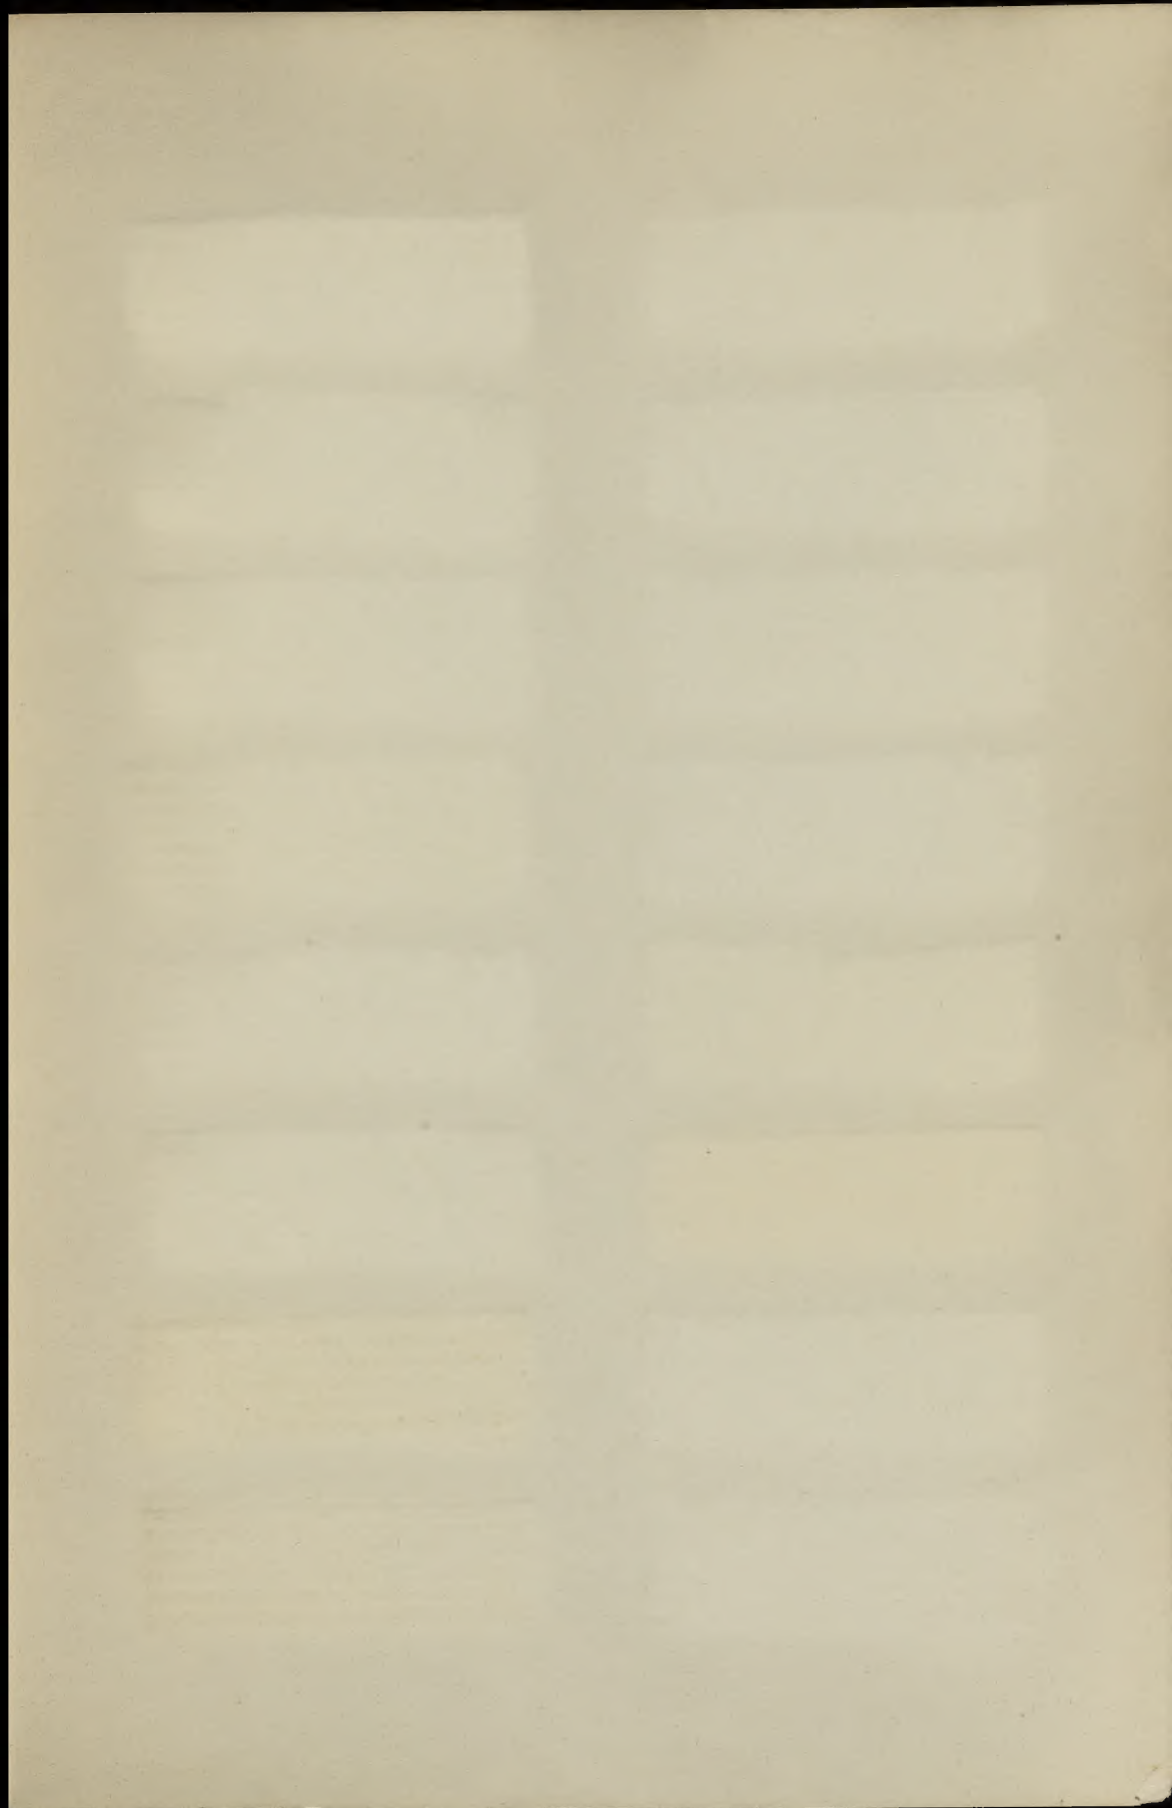



CONS.  
SPECIAL

87-B  
18350

7

dyer



